



Care and Maintenance

From renegade paring knives to busy lifestyles — LG EDEN is made to withstand life. In fact, no special cleaning products are needed to keep your countertop looking great day in, day out. But like all fine materials, damage may occur if your countertop is mistreated. To help prevent this from happening, we've outlined a few simple ways to be sure your countertop maintains its original elegance and beauty for years to come. Normal cleaning only requires a damp cloth and a mild cleanser. If you've chosen a matte finish, you can use an abrasive cleaner like Ajax or Comet. If you do use an abrasive cleaner, we recommend periodically cleaning the entire surface in a circular motion to maintain uniformity. Avoid using strong acidic cleansers (like those designed for drains, toilets or ovens). Some of them can cause whitening, which can be difficult to remove.

A few common sense precautions include not placing pans directly from the burner or oven on your countertops. Although LG EDEN can withstand temperatures of up to 225 degrees, prolonged or extreme heat can cause yellowing.

Troublesome spills and stains, like food dye, tea and fruit drinks can be removed with full strength bleach followed by a general cleaner flushed with water. Be sure and not let the bleach remain on the surface for more than five minutes. If a lit cigarette should come in contact with your countertop, a nicotine stain or a scorch mark can occur. Simply use an abrasive cleaner or buff in a circular motion with a Scotch-Brite® pad to remove.